

# MAVERICK STORM

## 4 PROFILE

### User Manual



Model ID: MAVERICKSTORM4PROFILE

**CHAUVENT**  
PROFESSIONAL

## Edition Notes

The Maverick Storm 4 Profile User Manual includes a description, safety precautions, installation, programming, operation, and maintenance instructions for the Maverick Storm 4 Profile as of the release date of this edition.

### Trademarks

Chauvet, Chauvet Professional, the Chauvet logo, and Maverick are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

### Copyright Notice

The works of authorship contained in this manual, including, but not limited to, all designs, text, and images are owned by Chauvet.

**© Copyright 2025 Chauvet & Sons, LLC. All rights reserved.**

Electronically published by Chauvet in the United States of America.

### Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

### Document Printing

For best results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure the printer to scale the content accordingly.

### Intended Audience

Any person installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

### Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions.

### Document Revision

Go to [www.chauvetprofessional.com](http://www.chauvetprofessional.com) for the latest version.

Revision	Date	Description
12	8/2025	Updated torque and vacuum measurements. Updated weight in Tech. Specs.

## Table of Contents

# TABLE OF CONTENTS

<b>1. Before You Begin .....</b>	1
What Is Included .....	1
Claims .....	1
Text Conventions .....	1
Symbols .....	1
Safety Notes.....	2
FCC Statement of Compliance .....	3
RF Exposure Warning for North America and Australia.....	3
Expected LED Lifespan.....	3
<b>2. Introduction .....</b>	4
Features .....	4
Product Overview.....	4
Product Dimensions .....	5
<b>3. Setup .....</b>	6
AC Power .....	6
AC Plug .....	6
Fuse Replacement .....	6
USB Software Update .....	6
Signal Connections .....	7
Control Personalities .....	7
DMX Linking.....	7
Remote Device Management.....	7
Art-Net™ Connection .....	7
sACN Connection.....	7
Mounting .....	8
Orientation.....	8
Rigging .....	8
Procedure.....	8
Sky Tracker Mode .....	9
Sky Tracker Orientation .....	9
<b>4. Operation .....</b>	10
Control Panel Description .....	10
Battery-Powered Display.....	10
Home Screen .....	10
Control Panel Lock.....	10
Passcode .....	10
Technician Mode.....	10
Menu Map .....	11
Control Configuration .....	16
Control Mode.....	16
Control Personalities .....	16
Starting Address.....	16
Network Setup.....	16
IP Mode .....	16
Universe .....	16

Manual IP Address .....	17
Subnet Mask.....	17
Control Channel Assignments and Values.....	17
Control Chart.....	20
Configuration Settings.....	21
Pan Reverse .....	21
Tilt Reverse .....	21
Screen Reverse .....	21
Pan Angle.....	21
Tilt Angle .....	21
Black out on Movement.....	21
Swap Pan and Tilt .....	21
WDMX Reset .....	21
Display Backlight Timer.....	21
Loss of Data .....	22
Fan Mode .....	22
Dimmer Curve .....	22
Pulse Width Modulation .....	22
LED Power .....	22
Minimum Zoom Focus.....	22
Preset Selection .....	22
Preset Synchronization .....	23
USB Update .....	23
Reset Function .....	23
Factory Reset.....	23
Test Mode .....	23
Auto Test.....	23
Manual Test .....	23
System Information .....	24
Offset Mode.....	24
Web Server .....	24
Gobo Wheels .....	25
Gobo Dimensions.....	25
Gobo Replacement .....	26
Error Codes.....	27
<b>5. Maintenance.....</b>	<b>31</b>
Product Maintenance .....	31
Torque Measurements .....	31
Vacuum Test Measurements .....	31
Gobo Maintenance .....	32
Transporting on Truss or Racks.....	32
<b>6. Technical Specifications .....</b>	<b>33</b>
<b>Contact Us .....</b>	<b>34</b>
Warranty & Returns.....	34

## Before You Begin

# 1. Before You Begin

### What Is Included

- Maverick Storm 4 Profile
- Seetronic Powerkon IP65 power cable
- 2 Omega brackets with mounting hardware
- Quick Reference Guide

### Claims

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate the claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

### Text Conventions

Convention	Meaning
<b>1–512</b>	A range of values
<b>50/60</b>	A set of values of which only one can be chosen
<b>Settings</b>	A menu option not to be modified
<b>&lt;ENTER&gt;</b>	A key to be pressed on the product's control panel

### Symbols

Symbol	Meaning
	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.

 Any reference to data or power connections in this manual assumes the use of Seetronic IP-rated cables.

The term “DMX” used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.

 Connection of the control signal: DMX line

- The product has XLR sockets for DMX input and output.

- Notice: This control circuit is isolated and belongs to the Class 2 data port.

The control circuit has a cumulative leakage current of less than 3.5 mA.

## Safety Notes

Read all the following safety notes before working with this product. These notes contain important information about the installation, usage, and maintenance of this product.



**This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained, certified technicians. Do not open the housing or attempt any repairs.**



**All applicable local codes and regulations apply to proper installation of this product.**

- The luminaire is intended for professional use only.
- The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 37.73 ft (11.5 m) is not expected.
- If the external flexible cable or cord of this luminaire is damaged, it shall be replaced by a special cord or cord exclusively available from the manufacturer or its service agent.
- The light source contained in this luminaire shall only be replaced by the manufacturer or its service agent or a similar qualified person.
- **CAUTION:**
  - This product's housing may be hot when operating. Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
  - When transferring the product from extreme temperature environments, (e.g., cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow the product to fully acclimate to the surrounding environment before connecting it to power.
  - Flashing light is known to trigger epileptic seizures. User must comply with local laws regarding notification of strobe use.
- **ALWAYS:**
  - Disconnect from power before cleaning the product or replacing the fuse.
  - When using an IP65-rated product in an outdoor environment, use IP65- (or higher) rated power and data cable.
  - Replace and secure IP-rated protective covers to all power, data, or other ports when not in use.
  - Replace the fuse with the same type and rating.
  - Use a safety cable when mounting this product overhead.
  - Connect this product to a grounded and protected circuit.
- **DO NOT:**
  - Open this product. It contains no user-serviceable parts.
  - Look at the light source when the product is on.
  - Leave any flammable material within 20 cm of this product while operating or connected to power.
  - Connect this product to a dimmer or rheostat.
  - Operate this product if the housing, lenses, or cables appear damaged.
  - Submerge this product (adhere to standards for the published IP rating). Regular outdoor operation is fine.
  - Permanently install outdoors in locations with extreme environmental conditions. This includes, but is not limited to:
    - Exposure to a marine/saline environment (within 3 miles of a saltwater body of water).
    - Locations where normal temperatures exceed the temperature ranges in this manual.
    - Locations that are prone to flooding or being buried in snow.
    - Other areas where the product will be subject to extreme radiation or caustic substances.
  - ONLY use the hanging/mounting bracket to carry this product.
  - The maximum ambient temperature is 113 °F (45 °C). Do not operate this product at higher temperatures.
  - The minimum startup temperature is -4°F (-20°C). Do not start the product at lower temperatures.
  - The minimum ambient temperature is -22°F (-30°C). Do not operate the product at lower temperatures.
  - To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.
  - In the event of a serious operating problem, stop using immediately.



**If a Chauvet product requires service, contact Chauvet Technical Support.**

## Before You Begin

### FCC Statement of Compliance

This device complies with Part 15 Part B of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### RF Exposure Warning for North America and Australia

**Warning!** This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and the user. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### Expected LED Lifespan


Over time, use and heat will gradually reduce LED brightness. Clustered LEDs produce more heat than single LEDs, contributing to shorter lifespans if always used at full intensity. The average LED lifespan is 40,000 to 50,000 hours. To extend LED lifespan, maintain proper ventilation around the product, and limit the overall intensity.

## 2. Introduction

### Features

- Fully featured, compact, and lightweight IP65 1250 W LED yoke profile fixture, including CMY + CTO color mixing, a four-blade framing shutter system with rotation, a color wheel, 8.5:1 zoom, two prisms (five-facet round and linear), two rotating gobo wheels, and integrated sun shield
- 16-bit dimming of master dimmer for smooth control of fades
- Variable CMY + CTO color mixing system to create a wide pallet of colors
- CRI and CTB filters on color wheel for added flexibility
- Two rotating, indexing, and interchangeable slot and lock gobo wheels
- An animation wheel for kinetic textured effects
- DMX, WDMX, sACN, and Art-Net for full flexibility of control options
- RDM control over DMX for fixture reporting
- 6.4° to 58.3° zoom range for variable beam sizes
- Iris, five-facet round and linear prisms, and two frosts (light and medium) for beam control
- TRUE1-compatible power input
- Integrated sun shield for protecting the optical path from sunlight when the fixture is off
- Three setup menu presets and preset sync for cross-loading to multiple like fixtures for easy shop setup
- USB slot for software uploads
- Battery backup display with auto-rotate depending on fixture orientation
- Failsafe Ethernet connectivity allows for data to pass even if fixture power is lost
- Built in Sky Tracker mode allows for up to 4 fixtures to work together to create sky tracker effects


### Product Overview

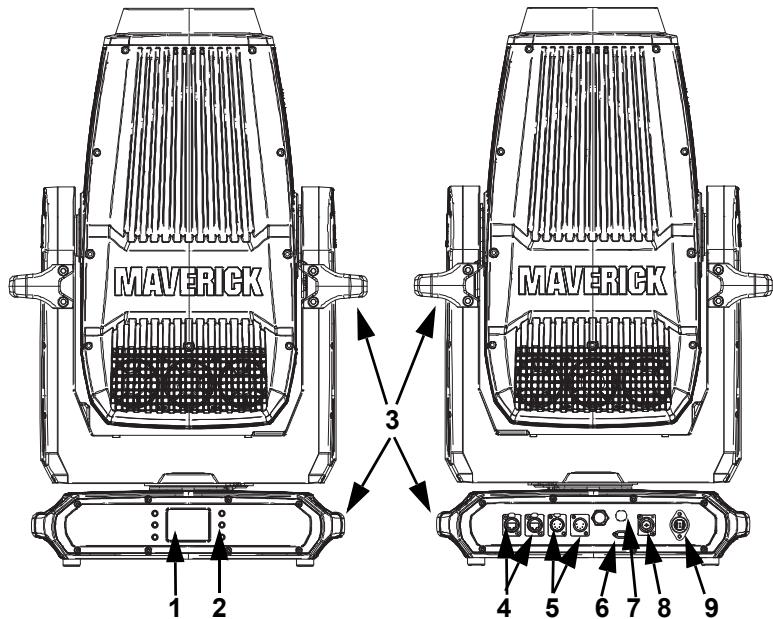

#	Name
1	LCD display
2	Menu buttons
3	Carry handle (x4)
4	Ethernet ports
5	DMX in/out
6	USBC port
7	Condensation valve
8	Power in
9	Fuse holder

## Introduction

### Product Dimensions

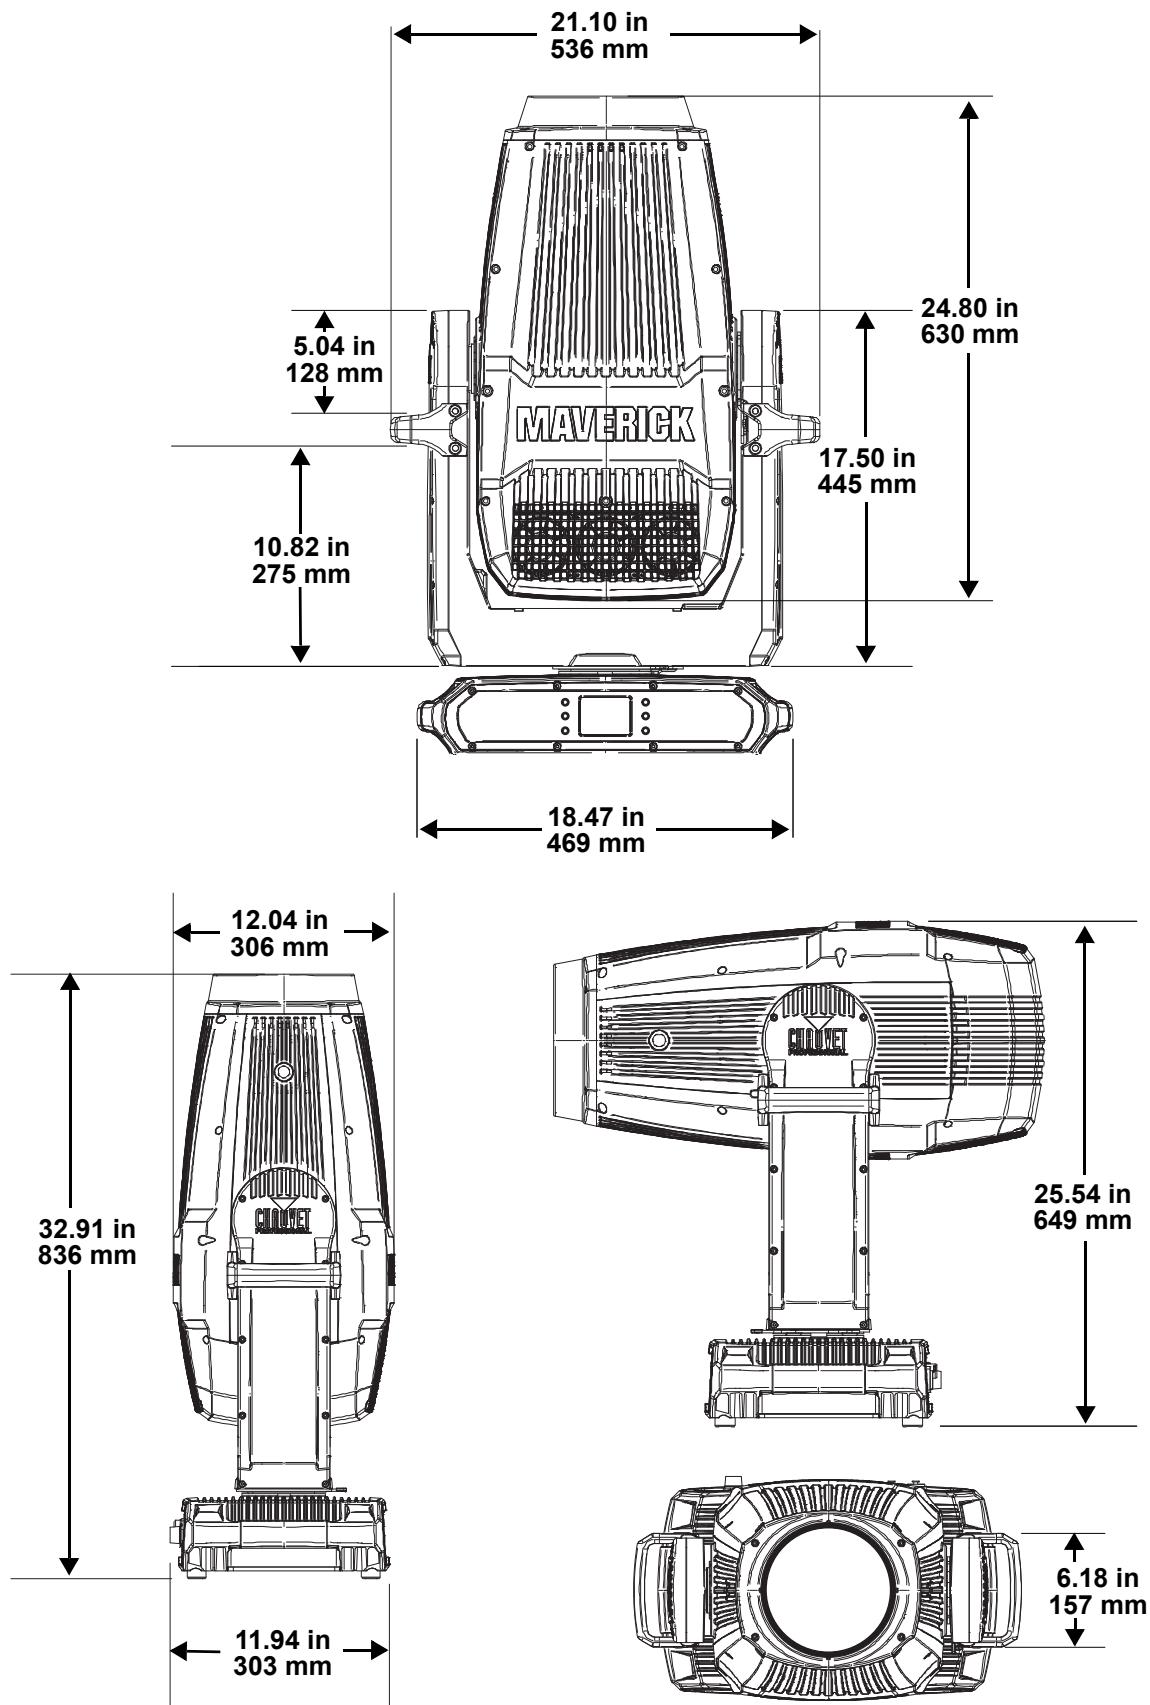

## 3. Setup

### AC Power

The Maverick Storm 4 Profile has an auto-ranging power supply, and it can work with an input voltage range of 100 to 240 VAC, 50/60 Hz.

To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart. The listed current rating indicates the product's average current draw under normal conditions.



- Always connect the product to a protected circuit (a circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

### AC Plug

The Maverick Storm 4 Profile comes with a power input cable terminated with a Seetronic Powerkon IP65 connector on one end and bare wire on the other end (U.S. market). Use the table below to wire a plug.

Connection	Wire (U.S.)	Wire (Europe)	Screw Color
AC Live	Black	Brown	Yellow or Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green

### Fuse Replacement

1. Disconnect this product from the power outlet.
2. Using a flat-head screwdriver, unscrew the fuse holder cap from the housing.
3. Remove the blown fuse and replace with another fuse of the same type and rating (25 A, 500 V).
4. Screw the fuse holder cap back in place and reconnect power.

### USB Software Update

The Maverick Storm 4 Profile allows for software updates with a USB device using the built-in USB port. To update the software using a USB flash drive, do the following:

1. Power on the product, and plug the flash drive into the USB port.
2. Once the flash drive has been detected, the message "**USB UPDATE**" will be displayed. Select **YES**.
3. The next screen will show the software versions available for this fixture on the USB drive. For multiple versions of the software for the same fixture, use **<UP>** or **<DOWN>** to select the desired version. Press **<ENTER>**.
4. The "**USB UPDATE**" screen will re-appear. Select **YES**.



**It is possible to update multiple units with the USB if they are daisy chained via DMX.**

5. The upgrade will start. **DO NOT** turn off the power or disconnect the USB while the USB LED is still blinking during the process. The screen display will read: "**USB Update Wait**". The update can take several minutes to complete.
  - When the USB firmware is done uploading, in some fixtures, the display will change to: "**DO NOT UNPLUG, UPDATING**".
6. When the update is completed, the fixture will automatically reboot.
7. Go to Fixture Information on the product's menu map and confirm the firmware revision.
8. When the boot-up process is finished, restart the product.



- Place the .chl file in the root directory of the USB drive.
- The product's USB port supports up to 32GB capacity and only works with FAT32 file format.



**Turning off the power or removing the USB while the USB LED is still blinking during the update will cause partial or total firmware failure in the targeted fixture(s). If this occurs, the user will need the UPLOAD 08 device to fix this. Please contact Chauvet regarding this device.**

## Setup

### Signal Connections

The Maverick Storm 4 Profile can receive a DMX, Art-Net™, or sACN signal. The product has two Amphenol XLRnet through ports, and 5-pin DMX in and out ports. It is possible to control compatible products individually with a single controller.

### Control Personalities

The Maverick Storm 4 Profile uses a 5-pin DMX data connection, WDMX, Art-Net™, or sACN for its two control personalities: **Dmx Mode 38 CH** and **Dmx Mode 55 CH**.

- Refer to the [Operation](#) chapter to learn how to configure the Maverick Storm 4 Profile to work in these personalities.
- The [Control Channel Assignments and Values](#) section provides detailed information regarding the control personalities.



**For more information about DMX standards or the DMX cables needed to link this product to a DMX controller, download the DMX primer from the Chauvet website: [www.chauvetprofessional.com](http://www.chauvetprofessional.com).**

### DMX Linking

Use a 5-pin DMX connection or a WMDX connection to link a DMX controller to the Maverick Storm 4 Profile. For more information about DMX, read the DMX primer at:

[https://www.chauvetprofessional.com/wp-content/uploads/2016/06/DMX\\_Primer.pdf](https://www.chauvetprofessional.com/wp-content/uploads/2016/06/DMX_Primer.pdf).

### Remote Device Management

Remote Device Management (RDM) is a standard for allowing DMX-enabled devices to communicate bi-directionally along existing DMX cabling. Check the DMX controller's User Manual or with the manufacturer, as not all DMX controllers have this capability. The Maverick Storm 4 Profile supports RDM protocol that allows feedback to make changes to menu map options.

### Art-Net™ Connection


Art-Net™ is an Ethernet protocol that uses TCP/IP that transfers a large amount of DMX512 data using an Amphenol XLRnet RJ45 connection over a large network. An Art-Net™ protocol document is available from [www.chauvetprofessional.com](http://www.chauvetprofessional.com).

Art-Net™ designed by and copyright Artistic Licence Holdings Ltd.

### sACN Connection

Streaming ACN (Architecture for Control Networks), also known as ANSI E1.31, is an Ethernet protocol that uses the layering and formatting of ACN to transport DMX512 data over IP or any other ACN-compatible network.

### Connection Diagram

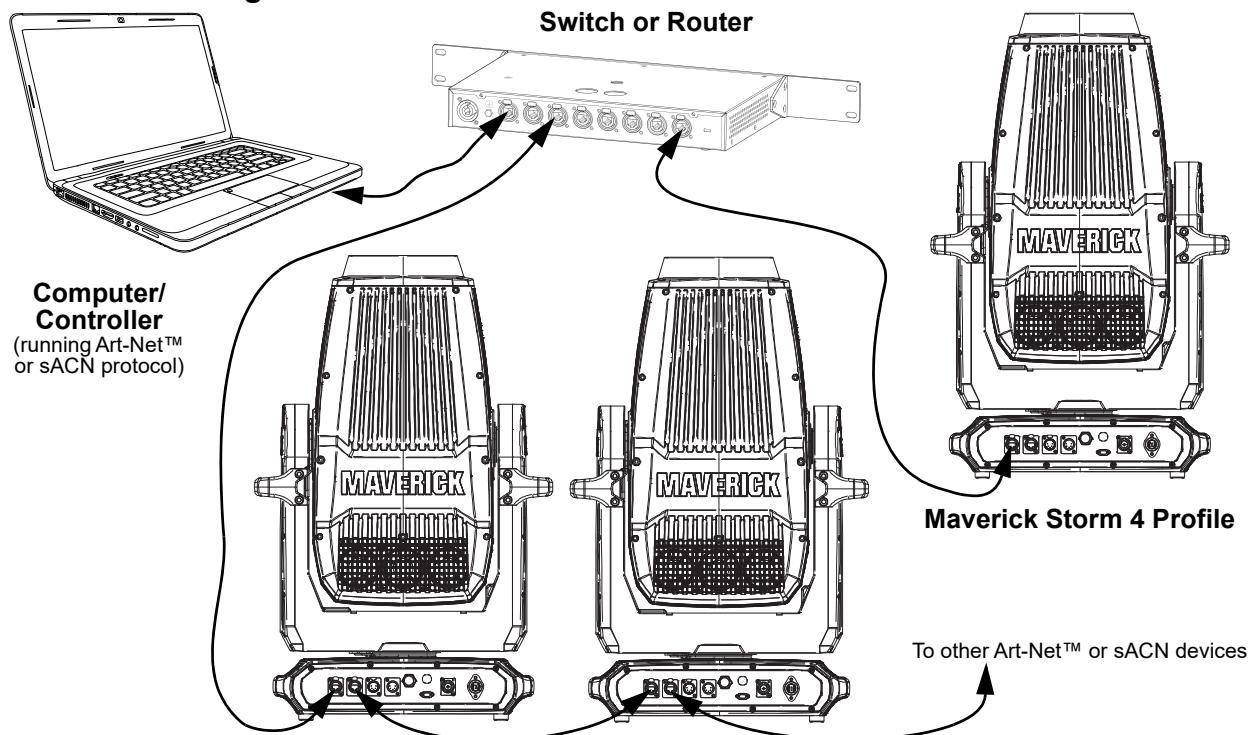

## Mounting

Before mounting the product, read and follow the safety recommendations indicated in the [Safety Notes](#). For the Chauvet Professional line of mounting clamps, go to <http://trusst.com/products/>.

### Orientation

Always mount this product in a safe position, making sure there is adequate room for ventilation, configuration, and maintenance.

### Rigging


Chauvet recommends using the following general guidelines when mounting this product:

- Before deciding on a location for the product, always make sure there is easy access to the product for maintenance and programming.
- Make sure that the structure and attachment points can support the weight before hanging the product (see the [Technical Specifications](#) for weight information).
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.
- When power linking multiple products, mount the products close enough for power-linking cables to reach.

### Procedure

The Maverick Storm 4 Profile comes with 2 Omega brackets. The user can directly attach mounting clamps (sold separately) to these omega brackets. Use at least two mounting points per product. Make sure the clamps are capable of supporting the weight of this product. For the Chauvet Professional line of mounting clamps, go to <http://www.trusst.com/products>.

#### Mounting Diagram

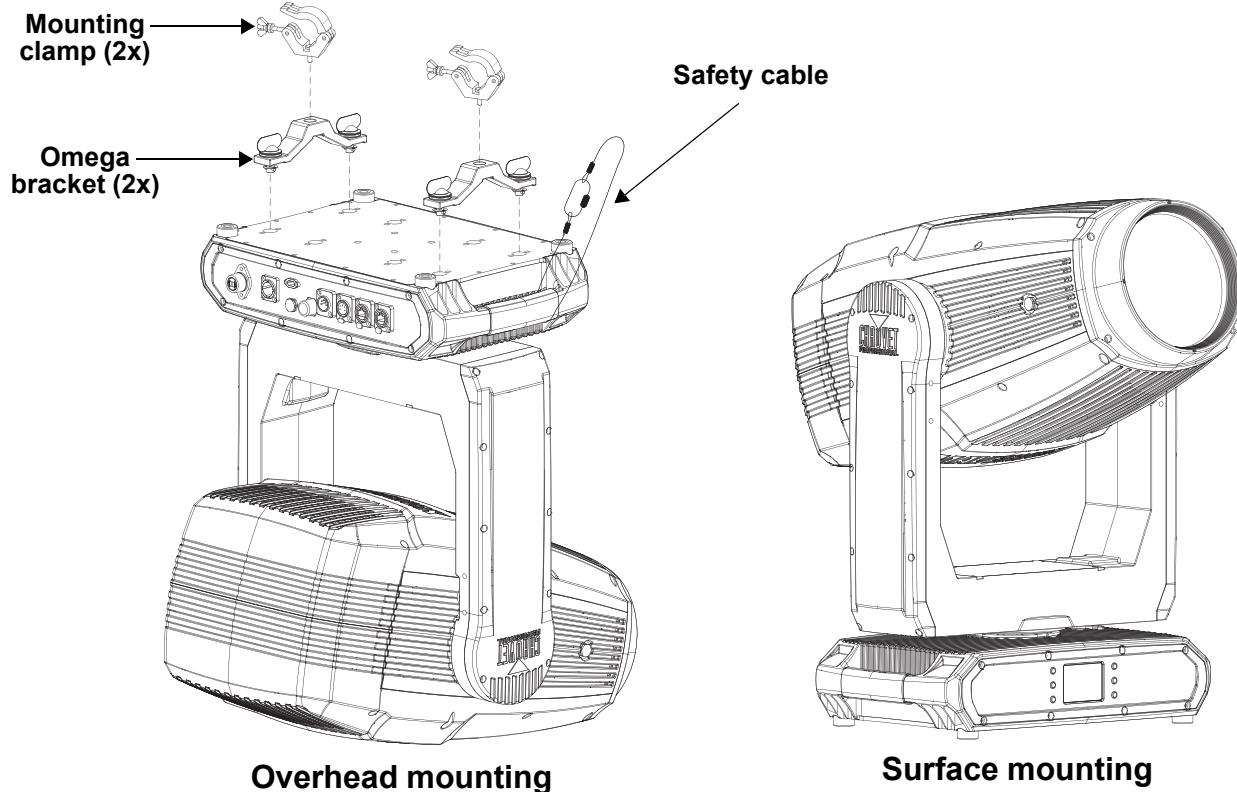

Use the 140-D Omega brackets that is supplied with the fixture when doing an overhead mount.

## Setup

### Sky Tracker Mode

Allows up to four Maverick Storm 4 Profiles to work together to create standalone air effects:

1. Connect all fixtures together with DMX cables
2. Make sure all fixtures are in DMX control protocol.
3. Go to **Personality Menu**, select **Sky Tracker** on all fixtures that will be used in this mode.
4. Go to **Settings** menu, arrow down to select **Sky Tracker Mode**, and press **<ENTER>**.
5. Arrow down to the **Fixture ID** setting. On each fixture, choose the **Fixture ID** (1 - 4).




**Note that the fixture 1 is the master fixture and 2-4 will follow the direction of fixture 1**



6. Once each fixture is set up, go back to fixture 1 to set up the show. Please refer to **Menu Map** to set each parameter as needed. Fixture 1 will hold these settings even if the power is turned off or the fixture modes are changed.
  - **Fixture movement size and speed are at 0 default. These setting values MUST be increased to see movement in the fixtures.**
  - **Fixture dimmer is at 0 default. This setting value must be increased to see output in the fixtures.**

### Sky Tracker Orientation

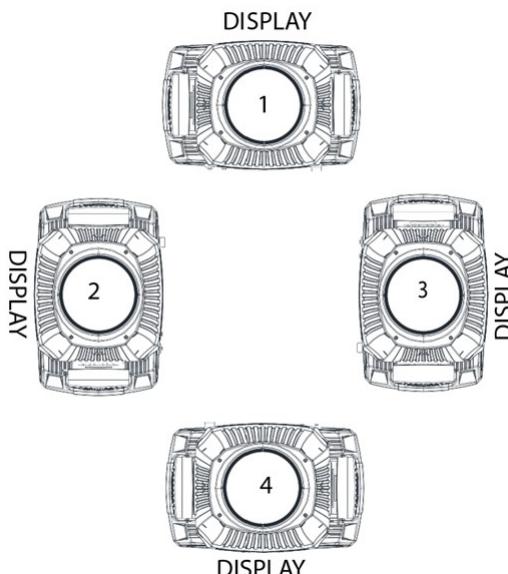

**Display always faces out**


## 4. Operation

### Control Panel Description

Button	Name	Function
↑	<UP>	Navigates upwards through the menu list or increases the value when in a function
☰	<MENU>	Exits from the current menu or function
↓	<DOWN>	Navigates downwards through the menu list or decreases the value when in a function
⬅	<LEFT>	Navigates leftwards through the menu list
➡	<ENTER>	Enables the currently displayed menu or sets the selected value into the function
➡	<RIGHT>	Navigates rightwards through the menu list

### Battery-Powered Display

The Maverick Storm 4 Profile has a battery-powered display that enables access to the menu when the product is powered off. Press and hold <MENU> until the display activates (approximately 15 seconds).

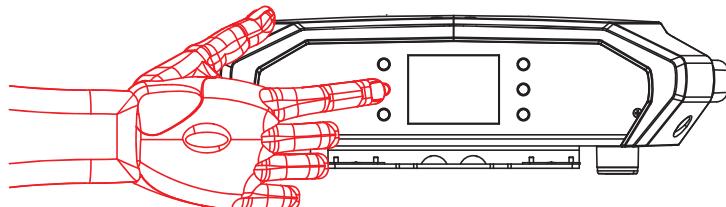

### Home Screen

The Maverick Storm 4 Profile has a home screen that shows the current control protocols, personalities, starting addresses, IP addresses, and universes. To see the home screen, press <MENU> repeatedly until it shows on the display. From the home screen, touch any of the displayed control settings to immediately jump to that part of the menu, such as the personality, starting address, or universe, or press <ENTER> to reach the main menu.

### Control Panel Lock

The setting locks or unlocks the control panel.

1. Go to the **Settings** main level.
2. Select the **Lock Screen** option.
3. Select **NO** (control panel stays unlocked) or **YES** (locks control panel).




**When the control panel lock is activated, the product will prompt for the passcode in order to access the menu. Enter the passcode as described below.**

### Passcode

After being prompted to enter the passcode, enter the numbers **0920**.

### Technician Mode

The technician mode disables the pan and tilt motors, allowing the output of the product to be aimed by hand. To enable the technician mode of the Maverick Storm 4 Profile, hold <UP> and <LEFT> while the product is powering on. When the product is turned off and back on, the pan and tilt will return to normal function.

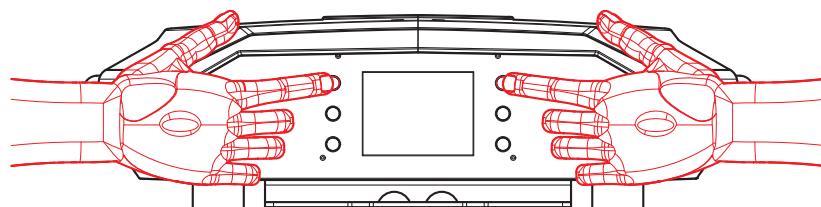

## Operation

### Menu Map

Refer to the Maverick Storm 4 Profile product page on [www.chauvetprofessional.com](http://www.chauvetprofessional.com) for the latest menu map.

Main Level	Programming Levels		Description
<b>Address</b>	<b>001–512</b>		Sets the starting address
<b>Network Setup</b>	<b>IP Mode</b>	<b>Manual</b>	Manually set IP address
		<b>DHCP</b>	Network sets IP address
		<b>Static</b>	Product sets IP address
	<b>Universe</b>	<b>000–255 (Art-Net™) 001–256 (sACN)</b>	Sets the universe
	<b>Ip</b>	<b>_____ (000–255)</b>	Sets the IP address in Manual mode
	<b>SubMask</b>	<b>_____ (000–255)</b>	Sets the Subnet Mask in Manual mode
<b>Personality</b>	<b>Dmx Mode 38 CH</b>	<b>NO</b>	Selects the 38-channel mode
	<b>Dmx Mode 55 CH</b>	<b>YES</b>	Selects the 55-channel mode
	<b>Sky Tracker Mode</b>	<b>YES NO</b>	Choose Sky Tracker Mode to activate
<b>Settings</b>	<b>Control Mode</b>	<b>DMX</b>	Sets the control protocol
		<b>ArtNet</b>	
		<b>sACN</b>	
		<b>WDMX</b>	
	<b>Pan Reverse</b>	<b>NO</b>	Normal pan
		<b>YES</b>	Reversed pan
	<b>Tilt Reverse</b>	<b>NO</b>	Normal tilt
		<b>YES</b>	Reversed tilt
	<b>Screen Reverse</b>	<b>NO</b>	Normal display orientation
		<b>YES</b>	Inverted display orientation
		<b>AUTO</b>	Automatic display orientation
	<b>Pan Angle</b>	<b>540</b>	540° pan range
		<b>360</b>	360° pan range
		<b>180</b>	180° pan range
	<b>Tilt Angle</b>	<b>270</b>	270° tilt range
		<b>180</b>	180° tilt range
		<b>90</b>	90° tilt range
	<b>BL. O. P/T Move</b>	<b>NO</b>	Enable/disable blackout while panning/tilting
		<b>YES</b>	
	<b>BL. O. ColorMove</b>	<b>NO</b>	Enable/disable blackout while color wheel is moving
		<b>YES</b>	
	<b>BL. O. GoboMove</b>	<b>NO</b>	Enable/disable blackout while gobo wheels are moving
		<b>YES</b>	
	<b>Lock Screen</b>	<b>NO</b>	Lock the buttons
		<b>YES</b>	Passcode: <b>0920</b>
	<b>Swap XY</b>	<b>NO</b>	Do not swap pan and tilt
		<b>YES</b>	Pan controls tilt, tilt controls pan
	<b>WDMX Reset</b>	<b>NO</b>	Do not reset WDMX
		<b>YES</b>	Reset WDMX
	<b>Backlight Timer</b>	<b>30S</b>	Display turns off after 30 seconds
		<b>1M</b>	Display turns off after 1 minute
		<b>5M</b>	Display turns off after 5 minutes
		<b>ON</b>	Display stays on

Main Level	Programming Levels		Description
Settings (cont.)	Loss of Data	Hold	Holds last signal received
		Close	Blacks out fixture
	Fans	Auto	Fan speed according to product temperature
		Full	Fan speed set on high
		ECO	Quiet mode
		TV25	Maintains LED output up to an ambient temperature of 77 °F (25 °C) (TV25) or 95 °F (35 °C) (TV35).
		TV35	When using these fan modes, please set the <b>PWM Options</b> to <b>6000Hz</b> or <b>15000Hz</b> to prevent any harmonization noise.
	Sky Tracker Mode	Dimmer	Set fixture dimmer
		Shutter	Set fixture strobe (default 255)
		Cyan	Set fixture Cyan
		Magenta	Set fixture Magenta
		Yellow	Set fixture Yellow
		Color wheel	Set fixture Color wheel
		Gobo 1	Set fixture Gobo wheel 1
		Gobo 2	Set fixture Gobo wheel 2
		Prism 1	Set fixture Prism 1
		Prism 2	Set fixture Prism 2
		Focus	Set fixture Focus
		Zoom	Set fixture Zoom
	Shape	Fig 8	Set fixture movement shape
		Circle	
		Square	
		Tri	
		Pan	
		Tilt	
	Pan offset	000–255	Set fixture pan offset (default 128)
		000–255	Set fixture tilt offset (default 128)
		000–255	Set fixture movement size
		000–255	Set fixture movement speed
		001–004	Set movement delay from fixture to fixture
	Dimmer Curve	Fixture ID	Set fixture ID, 1 (master), 2-4 (slave)
		Linear	Set the dimmer curve
		Square	
		I Squa	
		SCurve	
	PWM Option	Linear2	
		600 Hz	Sets the Pulse Width Modulation frequency
		1200 Hz	
		2000 Hz	
		4000 Hz	
		6000 Hz	
	LED POWER	15000 Hz	
		64–255	Sets LED power

## Operation

Main Level	Programming Levels		Description
Settings (cont.)	Min Zoom Focus	NO YES	Enables/disables Min Zoom Focus
	Preset Select	PRESET A	
		PRESET B	Recorded preset menu options
		PRESET C	
	Preset Sync	NO	Transfers recorded preset menu options to other Maverick Storm 4 Profile fixtures in the DMX daisy chain
		YES	
	USB Update	NO	Update firmware via USB C
		YES	
	Reset Function	Pan/Tilt	Reset individual functions or all functions from start-up
		Iris/Prism	
		Color/CMY/Blade	
		Gobo/Gobo Rotate	
		Frost/Animation	
		All	
	Factory Settings	NO	Reset to factory default settings
		YES	
Test	Auto Test		Auto test all functions
	Manual Test	Pan	Manually control and test all settings through the control panel
		Pan Fine	
		Tilt	
		Tilt Fine	
		P/T Speed	
		Dimmer	
		Dimmer Fine	
		Shutter	
		Virtual Shaking	
		Cyan	
		Magenta	
		Yellow	
		CTO	
		Color	
		Gobo	
		Gobo Rotate	
		Gobo Index	
		Gobo2	
		Gobo2 Rotate	
		Gobo2 Index	
		Animation	
		Animation Rotate	
		Blade1-1	
		Blade1-1 Fine	
		Blade1-2	

Main Level	Programming Levels		Description	
Test (cont.)	Manual Test (cont.)	Blade1-2 Fine	0-255	
		Blade2-1		
		Blade2-1 Fine		
		Blade2-2		
		Blade2-2 Fine		
		Blade3-1		
		Blade3-1 Fine		
		Blade3-2		
		Blade3-2 Fine		
		Blade4-1		
		Blade4-1 Fine		
		Blade4-2		
		Blade4-2 Fine		
		Blade Rotate		
		Blade. Rota Fine		
		Focus		
		Focus Fine		
		Focus Auto		
Information	Fixture Information	Zoom	0-255	
		Zoom Fine		
		Prism		
		Prism Rotate		
		Prism2		
		Prism2 Rotate		
		Iris		
		Frost		
		Frost2		
		CMY Macro		
Information	Fan Information	CMY Macro Speed	000-255	
		Special Function		
		Ver		
		V_	Shows firmware version	
		Running Mode		
		---	Shows current running mode	
		DMX Address		
		---	Shows current starting address	
Information	Error Information	Temperature	000-255	
		---	Shows current product temperature in °C	
		Fixture Hours		
		-----	Shows hours product has been on	
		LED Hours		
Information	Channel Information	-----	Shows hours LED has been on	
		Ip	000-255	
		-----	Shows current IP address	
Information		SubMask		
		-----	Shows current Subnet Mask	
		-----		
Information	Fan Information	Base Fan1-4	Speed _---	
		_FAN_ _ _ (x17)		
Information	Error Information	Speed _---	Shows speed of each fan in rpm	
		-----		
		-----	Shows any errors, or No Error!	
Information	Channel Information	Frequency	000-255	
		Pan		
		Pan Fine		

## Operation

Main Level	Programming Levels	Description
Information (cont.)	Tilt Tilt Fine P/T Speed Dimmer Dimmer Fine Shutter Virtual Shaking Cyan Magenta Yellow CTO Color Gobo Gobo Rotate Gobo Index Gobo2 Gobo2 Rotate Gobo2 Index Animation Animation Rotate Blade1- 1 Blade1- 1 Fine Blade1- 2 Blade1- 2 Fine Blade2- 1 Blade2- 1 Fine Blade2- 2 Blade2- 2 Fine Blade3- 1 Blade3- 1 Fine Blade3- 2 Blade3- 2 Fine Blade4- 1 Blade4- 1 Fine Blade4- 2 Blade4- 2 Fine Blade Rotate Blade. Rota Fine Focus Focus Fine Focus Auto Zoom Zoom Fine Prism	000–255  Shows all current values from input signals

Main Level	Programming Levels		Description
Information (cont.)	Channel Information (cont.)	Prism Rotate	Shows all current values from input signals
		Prism2	
		Prism2 Rotate	
		Iris	
		Frost	
		Frost2	
		CMY Macro	
		CMY Macro Speed	
		Special Function	
		000–255	

## Control Configuration

Use control configurations to operate the product with a DMX, Art-Net™, or sACN controller.

### Control Mode

The Maverick Storm 4 Profile works with wired DMX, WDMX, Art-Net™, and sACN control signals. To select which protocol to use:

1. Go to the **Settings** main level.
2. Select the **Control Mode** option.
3. Select the desired protocol, from **DMX**, **ArtNet**, **sACN**, or **WDMX**.

### Control Personalities

To set the control personality:

1. Go to the **Personality** main level.
2. Select the desired personality, from **Dmx Mode 38 CH** or **Dmx Mode 55 CH**.
  - See the [Starting Address](#) section for the highest selectable starting address for each personality.
  - Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

### Starting Address

Each product will respond to a unique starting address from the controller. All products with the same starting address will respond in unison. To set the starting address:

1. Go to the **Address** main level.
2. Select the starting address (**001–512**).
  - The highest recommended starting address for **Dmx Mode 38 CH** is **475**.
  - The highest recommended starting address for **Dmx Mode 55 CH** is **458**.

### Network Setup

The Network Setup settings control the IP address, subnet mask, and universe of the product.

#### IP Mode

To choose how the IP address is set:

1. Go to the **Network Setup** main level.
2. Select the **IP Mode** option.
3. Select the desired IP mode, from **Manual** (to set a custom IP address), **DHCP** (the IP address is assigned by the connected network), or **Static** (the product uses a default, preset IP address).

#### Universe

To assign an Art-Net™ or sACN universe to the Maverick Storm 4 Profile:

1. Go to the **Network Setup** main level.
2. Select the **Universe** option.
3. Set the universe, from **000–255** (for Art-Net™) or from **001–256** (for sACN).

## Operation

### Manual IP Address

To set the IP address when the **IP Mode** is set to **Manual**:

1. Go to the **Network Setup** main level.
2. Select the **Ip** option.
3. Set the 4 values of the IP address from **000–255**.

### Subnet Mask

To set the subnet mask:

1. Go to the **Network Setup** main level.
2. Select the **SubMask** option.
3. Set the 4 values of the subnet mask from **000–255**.

## Control Channel Assignments and Values

38CH	55CH	Function	Value	Percent/Setting
1	1	Pan	000 ⇄ 255	0–100%
2	2	Fine pan	000 ⇄ 255	Fine control (16-bit)
3	3	Tilt	000 ⇄ 255	0–100%
4	4	Fine tilt	000 ⇄ 255	Fine control (16-bit)
5	5	Pan/tilt speed	000 ⇄ 255	Fast to slow
6	6	Dimmer	000 ⇄ 255	0–100%
–	7	Fine dimmer	000 ⇄ 255	Fine control (16-bit)
7	8	Strobe	000 ⇄ 003	Off
			004 ⇄ 007	On
			008 ⇄ 076	Synchronized strobe, slow to fast
			077 ⇄ 145	Pulse strobe, slow to fast
			146 ⇄ 215	Random strobe, slow to fast
			216 ⇄ 255	On
8	9	Virtual shaking	000 ⇄ 001	No function
			002 ⇄ 128	Shaking effect, slow to fast
			129 ⇄ 255	Fade effect, slow to fast
9	10	Cyan	000 ⇄ 255	0–100%
10	11	Magenta	000 ⇄ 255	0–100%
11	12	Yellow	000 ⇄ 255	0–100%
12	13	CTO	000 ⇄ 255	0–100%
13	14	Color wheel	000 ⇄ 007	Open
			008 ⇄ 015	Color 1
			016 ⇄ 023	Color 2
			024 ⇄ 031	Color 3
			032 ⇄ 039	Color 4
			040 ⇄ 047	Color 5
			048 ⇄ 059	Color 6
			060 ⇄ 187	Color wheel indexing
			188 ⇄ 219	Color scroll, fast to slow
			220 ⇄ 223	Stop
			224 ⇄ 255	Reverse color scroll, slow to fast

38CH	55CH	Function	Value	Percent/Setting
14	15	<b>Gobo wheel 1</b> (see <a href="#">Gobo Wheels</a> )	001 ⇄ 007 008 ⇄ 015 016 ⇄ 023 024 ⇄ 031 032 ⇄ 039 040 ⇄ 047 048 ⇄ 063 064 ⇄ 071 072 ⇄ 079 080 ⇄ 087 088 ⇄ 095 096 ⇄ 103 104 ⇄ 111 112 ⇄ 127 128 ⇄ 191 192 ⇄ 255	Open Gobo 1 (Dots) Gobo 2 (Paperclip Party) Gobo 3 (Orbital) Gobo 4 (Dirty Dirt) Gobo 5 (Box Cutter) Gobo 6 (Crazy Turns) Gobo 6 shaking, slow to fast Gobo 5 shaking, slow to fast Gobo 4 shaking, slow to fast Gobo 3 shaking, slow to fast Gobo 2 shaking, slow to fast Gobo 1 shaking, slow to fast Open Gobo scroll, slow to fast Reverse gobo scroll, slow to fast
15	16	<b>Gobo wheel 1 rotate</b>	000 ⇄ 063 064 ⇄ 145 146 ⇄ 149 150 ⇄ 231 232 ⇄ 255	Gobo index Rotation, fast to slow Stop Reverse rotation, slow to fast Alternating clockwise/counterclockwise rotation, short to long
-	17	<b>Gobo 1 fine rotate</b>	000 ⇄ 255	Fine control (16-bit)
16	18	<b>Gobo wheel 2</b> (see <a href="#">Gobo Wheels</a> )	001 ⇄ 007 008 ⇄ 015 016 ⇄ 023 024 ⇄ 031 032 ⇄ 039 040 ⇄ 047 048 ⇄ 063 064 ⇄ 071 072 ⇄ 079 080 ⇄ 087 088 ⇄ 095 096 ⇄ 103 104 ⇄ 111 112 ⇄ 127 128 ⇄ 191 192 ⇄ 255	Open Gobo 1 (Pipes & Poles) Gobo 2 (Cookie Cutter) Gobo 3 (This Way) Gobo 4 (Fast Moves) Gobo 5 (Laser Rays) Gobo 6 (Limbo) Gobo 6 shaking, slow to fast Gobo 5 shaking, slow to fast Gobo 4 shaking, slow to fast Gobo 3 shaking, slow to fast Gobo 2 shaking, slow to fast Gobo 1 shaking, slow to fast Open Gobo scroll, slow to fast Reverse gobo scroll, slow to fast
17	19	<b>Gobo wheel 2 rotate</b>	000 ⇄ 063 064 ⇄ 145 146 ⇄ 149 150 ⇄ 231 232 ⇄ 255	Gobo index Rotation, fast to slow Stop Reverse rotation, slow to fast Alternating clockwise/counterclockwise rotation, short to long
-	20	<b>Gobo 2 fine rotate</b>	000 ⇄ 255	Fine control (16-bit)
18	21	<b>Animation wheel</b>	000 ⇄ 255	0–100%

## Operation

38CH	55CH	Function	Value	Percent/Setting
19	22	Animation wheel rotate	000 ⇄ 124 125 ⇄ 130 131 ⇄ 255	Rotation, fast to slow Stop Reverse rotation, slow to fast
20	23	Blade 1-1	000 ⇄ 255	0–100%
–	24	Fine blade 1-1	000 ⇄ 255	Fine control (16-bit)
21	25	Blade 1-2	000 ⇄ 255	0–100%
–	26	Fine blade 1-2	000 ⇄ 255	Fine control (16-bit)
22	27	Blade 2-1	000 ⇄ 255	0–100%
–	28	Fine blade 2-1	000 ⇄ 255	Fine control (16-bit)
23	29	Blade 2-2	000 ⇄ 255	0–100%
–	30	Fine blade 2-2	000 ⇄ 255	Fine control (16-bit)
24	31	Blade 3-1	000 ⇄ 255	0–100%
–	32	Fine blade 3-1	000 ⇄ 255	Fine control (16-bit)
25	33	Blade 3-2	000 ⇄ 255	0–100%
–	34	Fine blade 3-2	000 ⇄ 255	Fine control (16-bit)
26	35	Blade 4-1	000 ⇄ 255	0–100%
–	36	Fine blade 4-1	000 ⇄ 255	Fine control (16-bit)
27	37	Blade 4-2	000 ⇄ 255	0–100%
–	38	Fine blade 4-2	000 ⇄ 255	Fine control (16-bit)
28	39	Blade rotation	000 ⇄ 255	0–100%
–	40	Fine blade rotation	000 ⇄ 255	Fine control (16-bit)
29	41	Focus	000 ⇄ 255	0–100%
–	42	Fine focus	000 ⇄ 255	Fine control (16-bit)
–	43	Auto focus	000 ⇄ 010 011 ⇄ 030 031 ⇄ 050 051 ⇄ 070 071 ⇄ 090 091 ⇄ 110 111 ⇄ 130 131 ⇄ 150 151 ⇄ 170 171 ⇄ 190 191 ⇄ 210 211 ⇄ 255	No function 0-5 meters 6 meters 7 meters 8 meters 9 meters 10 meters 12.5 meters 15 meters 17.5 meters 20-60 meters Auto detect distance
30	44	Zoom	000 ⇄ 255	0–100%
–	45	Fine zoom	000 ⇄ 255	Fine control (16-bit)
31	46	Prism 1	000 ⇄ 004 005 ⇄ 255	No function Prism insert
32	47	Prism 1 rotate	000 ⇄ 127 128 ⇄ 189 190 ⇄ 193 194 ⇄ 255	Prism index Clockwise rotation, fast to slow Stop Counterclockwise rotation, slow to fast
33	48	Prism 2	000 ⇄ 004 005 ⇄ 255	No function Prism insert

38CH	55CH	Function	Value	Percent/Setting
34	49	Prism 2 rotate	000 ⇄ 127 128 ⇄ 189 190 ⇄ 193 194 ⇄ 255	Prism index Clockwise rotation, fast to slow Stop Counterclockwise rotation, slow to fast
35	50	Iris	000 ⇄ 063 064 ⇄ 127 128 ⇄ 191 192 ⇄ 255	Big to small Auto change, slow to fast Slow open, fast close, slow to fast Fast open, slow close, slow to fast
36	51	Frost 1	000 ⇄ 255	0–100%
37	52	Frost 2	000 ⇄ 255	0–100%
–	53	CMY macro	000 ⇄ 009 010 ⇄ 255	No function CMY macro
–	54	CMY macro speed	000 ⇄ 255	Fast to slow
38	55	Control (3 second hold)	000 ⇄ 255	See the <a href="#">Control Chart</a>

## Control Chart

DMX Value	Percent/Setting	DMX Value	Percent/Setting
000 ⇄ 007	No function	096 ⇄ 103	Pan reset
008 ⇄ 015	Blackout during pan/tilt	104 ⇄ 111	Tilt reset
016 ⇄ 023	Blackout while color wheel is moving	112 ⇄ 119	Color wheel reset
024 ⇄ 031	Blackout while gobo wheels are moving	120 ⇄ 127	Gobo wheels reset
032 ⇄ 039	Blackout during pan/tilt/color wheel	128 ⇄ 135	No function
040 ⇄ 047	Blackout during pan/tilt/gobo wheels	136 ⇄ 143	Prism reset
048 ⇄ 055	Blackout during pan/tilt/color wheel/gobo wheels	144 ⇄ 151	Blades reset
056	No function	152 ⇄ 159	All reset
057	600 Hz PWM	160 ⇄ 167	Iris reset
058	1200 Hz PWM	168 ⇄ 175	Frost/animation wheel reset
059	2000 Hz PWM	176 ⇄ 183	Zoom reset
060	4000 Hz PWM	184 ⇄ 191	CMY/CTO reset
061	6000 Hz PWM	192 ⇄ 199	Fan mode ECO
062	15000 Hz PWM	200 ⇄ 207	Fan mode Full
063	No function	208 ⇄ 215	Fan mode Auto
064	Linear dimmer curve	216 ⇄ 220	Fan mode TV25
065	Square dimmer curve	221 ⇄ 225	Fan mode TV35
066	Inverse square dimmer curve	226 ⇄ 230	No function
067	S-curve dimmer curve	231 ⇄ 235	Pan/tilt swap on
068	Linear 2 dimmer curve	236 ⇄ 240	Pan/tilt swap off
069 ⇄ 075	No function	241 ⇄ 245	Min Zoom Focus off
076 ⇄ 080	Disengage sun shield	246 ⇄ 250	Min Zoom Focus on
081 ⇄ 084	Engage sun shield	251 ⇄ 255	No function
085 ⇄ 095	No function		

## Operation

### Configuration Settings

#### Pan Reverse

To set the orientation of the pan:

1. Go to the **Settings** main level.
2. Select the **Pan Reverse** option.
3. Select from **NO** (normal pan motion), or **YES** (reversed pan motion).

#### Tilt Reverse

To set the orientation of the tilt:

1. Go to the **Settings** main level.
2. Select the **Tilt Reverse** option.
3. Select from **NO** (normal tilt motion), or **YES** (reversed tilt motion).

#### Screen Reverse

To set the orientation of the display:

1. Go to the **Settings** main level.
2. Select the **Screen Reverse** option.
3. Select from **NO** (right-side up), **YES** (upside-down), or **AUTO** (automatic orientation).

#### Pan Angle

To set the maximum angle of the pan:

1. Go to the **Settings** main level.
2. Select the **Pan Angle** option.
3. Select from **540** (540°), **360** (360°), or **180** (180°).

#### Tilt Angle

To set the maximum angle of the tilt:

1. Go to the **Settings** main level.
2. Select the **Tilt Angle** option.
3. Select from **270** (260°), **180** (180°), or **090** (90°).

#### Black out on Movement

To set the product to black out while the pan/tilt, color wheel, or gobo wheels are moving:

1. Go to the **Settings** main level.
2. Select from the **BL. O. P/T Move** (black out on pan/tilt movement), **BL. O. ColorMove** (black out on color wheel movement), or **BL. O. GoboMove** (black out on gobo wheel movement) options.
3. Select from **NO** or **YES**.

#### Swap Pan and Tilt

To swap the controls for the pan and tilt:

1. Go to the **Settings** main level.
2. Select the **Swap XY** option.
3. Select from **NO** (pan controls pan, tilt controls tilt) or **YES** (pan controls tilt, tilt controls pan).

#### WDMX Reset

To reset the WDMX connection:

1. Go to the **Settings** main level.
2. Select the **WDMX Reset** option.
3. Select from **NO** or **YES**.

#### Display Backlight Timer

To set how long before an inactive display will turn off:

1. Go to the **Settings** main level.
2. Select the **Backlight Timer** option.
3. Select the length of the backlight timer, from **30S** (30 seconds), **1M** (1 minute), **5M** (5 minutes), or **ON** (always on).

## Loss of Data

To set how the product reacts to a loss of in control signal data:

1. Go to the **Settings** main level.
2. Select the **Loss of Data** option.
3. Select **Hold** (holds the last values received before signal loss) or **Close** (blacks out the product).

## Fan Mode

To set the fan speed mode:

1. Go to the **Settings** main level.
2. Select the **Fans** option.
3. Select the fan mode, from **Auto** (fan speed adjusts to product temperature), **Full** (fan speed at maximum), **ECO** (quiet mode), **TV25** (maintains LED output up to an ambient temperature of 77 °F [25 °C]), or **TV35** (maintains LED output up to an ambient temperature of 95 °F [35 °C]).



**When using the TV25 or TV35 fan mode, please set the PWM Options ([Pulse Width Modulation](#)) to 6000Hz or 15000Hz to prevent any harmonization noise.**

## Dimmer Curve

To set the dimmer curve:

1. Go to the **Settings** main level.
2. Select the **Dimmer Curve** option.
3. Select the dimmer curve, from **Linear**, **Square**, **I Squa**, **SCurve**, or **Linear2**.

## Pulse Width Modulation

To adjust the frequency of the pulse width modulation:

1. Go to the **Settings** main level.
2. Select the **PWM Option** option.
3. Select the frequency, from **600Hz**, **1200Hz**, **2000Hz**, **4000Hz**, **6000Hz**, or **15000Hz**.

## LED Power

To set the power of each LED color:

1. Go to the **Settings** main level.
2. Select the **LED POWER** option.
3. Set the LED power from **64–255**.

## Minimum Zoom Focus

To enable or disable the Min Zoom Focus function:

1. Go to the **Settings** main level.
2. Select the **Min Zoom Focus** option.
3. Select **NO** (manual independent zoom control) or **YES** (focus adjusts depending on zoom setting).

## Preset Selection

To select a preset configuration of menu options:

1. Go to the **Settings** main level.
2. Select the **Preset Select** option.
3. Select from **PRESET A** (default), **PRESET B**, or **PRESET C**.



- **Changes to settings automatically save to the currently selected Preset.**
- **If no Preset has been selected, changes to settings save to PRESET A.**
- **After selecting a Preset, the product will restart.**

## Operation

### Preset Synchronization

To transfer saved Presets from one Maverick Storm 4 Profile to another:

1. Connect the Maverick Storm 4 Profile products to receive the Presets by a DMX daisy chain.
2. Make the Maverick Storm 4 Profile with the Presets to transfer the first in the DMX daisy chain.
3. Power on all of the products.
4. Set all of the products to a **Control Mode** other than **WDMX**. (**DMX**, **ArtNet**, or **sACN**)
5. On the Maverick Storm 4 Profile with the Presets, go to the **Settings** main level.
6. Select the **Preset Sync** option.
7. Select **NO** (to cancel) or **YES** (to transfer the Presets to the connected products).



- All menu configurations are transferred except for the IP address.
- ONLY connect Maverick Storm 4 Profile products for this function!

### USB Update

To enable or disable software update using USB:

1. Go to the **Settings** main level.
2. Select the **USB Update** option.
3. Select **NO** (disables software update through USB) or **YES** (enables software update through USB).



See the [USB Software Update](#) section for the detailed instructions on how to update the Maverick Storm 4 Profile software using a USB C connection.

### Reset Function

To reset specific functions or the entire product:

1. Go to the **Settings** main level.
2. Select the **Reset Function** option.
3. Select the functions to reset, from **Pan/Tilt**, **Iris/Prism**, **Color/CMY/Blade**, **Gobo/Gobo Rotate**, **Frost/Animation**, or **All**.
4. Select **NO** (to cancel) or **YES** (to reset the selected functions).

### Factory Reset

To reset the product to factory settings:

1. Go to the **Settings** main level.
2. Select the **Factory Settings** option.
3. Select **NO** (to cancel) or **YES** (to reset the product configuration).

### Test Mode

#### Auto Test

To have the Maverick Storm 4 Profile automatically test all functions one after the other:

1. Go to the **Test** main level.
2. Select the **Auto Test** option.

#### Manual Test

To manually test an individual function of the Maverick Storm 4 Profile:

1. Go to the **Test** main level.
2. Select the **Manual Test** option.
3. Select a function to test, from **Pan**, **Pan Fine**, **Tilt**, **Tilt Fine**, **P/T Speed**, **Dimmer**, **Dimmer Fine**, **Shutter**, **Virtual Shaking**, **Cyan**, **Magenta**, **Yellow**, **CTO**, **Color**, **Gobo**, **Gobo Rotate**, **Gobo Index**, **Gobo2**, **Gobo2 Rotate**, **Gobo2 Index**, **Animation**, **Animation Rotate**, **Blade1-1**, **Blade1-1 Fine**, **Blade1-2**, **Blade1-2 Fine**, **Blade2-1**, **Blade2-1 Fine**, **Blade2-2**, **Blade2-2 Fine**, **Blade3-1**, **Blade3-1 Fine**, **Blade3-2**, **Blade3-2 Fine**, **Blade4-1**, **Blade4-1 Fine**, **Blade4-2**, **Blade4-2 Fine**, **Blade Rotate**, **Blade**, **Rota Fine**, **Focus**, **Focus Fine**, **Focus Auto**, **Zoom**, **Zoom Fine**, **Prism**, **Prism Rotate**, **Prism2**, **Prism2 Rotate**, **Iris**, **Frost**, **Frost2**, **CMY Macro**, **CMY Macro Speed**, or **Special Function**.
4. Increase or decrease the value of the selected function from **0-255** to test it.

## System Information

The information section of the menu displays statistics and the current status of the product's various functions. To view this information:

1. Go to the **Information** main level.
2. Select from the **Fixture Information**, **Fan Information**, **Error Information**, or **Channel Information** options.
3. Use **<UP>** and **<DOWN>** to view all information.

## Offset Mode

The Offset mode provides fine adjustments for the home position of every moving part in the optical path as well as the pan and tilt movements. To adjust these options and prevent borders showing or reduction of the light output:

1. From the main level screen, press and hold **<MENU>** until the passcode screen appears.
2. Enter the passcode: **0920** and press **<ENTER>**.
3. Select the "zero" position to adjust, from **PAN**, **TILT**, **COLOR**, **GOBO**, **GOBO ROTATE**, **GOBO2**, **FOCUS-GOBO**, **FOCUS-GOBO2**, **ZOOM**, **PRISM**, **PRISM ROT**, **IRIS**, **FROST**, **FROST2**, **CYAN**, **MAGENTA**, **YELLOW**, **CTO**, **DIMMER**, **MAC4**, **MAC5**, or **MAC6**.
4. Adjust the "zero" position for the selected function from **000–255**.

## Web Server

The Maverick Storm 4 Profile Web Server can be accessed by any computer on the same network as the product. It allows network access to system information, settings such as control setup, manual testing of all functions, firmware updates, and the ability to change the Web Server password.

1. Connect the product to power, and set the [Control Mode](#) to **ArtNet** and the [IP Mode](#) to **Static**.
2. Connect the product to a Windows computer with a network cable.
3. On the computer, set the first value of the IP address of the new network to match the first value of the IP address of the product. The IP address of the product is displayed on the [Home Screen](#).
4. Enter the IP address of the product into the URL bar of a web browser on the computer.
5. Enter both the User Name and Password as **admin** to log in.

### Information

The Information page on the Web Server displays the current settings and the system information of the Maverick Storm 4 Profile.

### Setup

The Setup page on the Web Server provides options for control, similar to the **Setup** menu on the product. Click **Save Settings** to send the new configuration to the product.

### Manual Test

The Manual Test page on the Web Server allows all output functions of the product to be controlled through the browser. To set all functions back to default, click **Reset**.

### Firmware Update

The Upgrade page on the Web Server allows the product to be updated with the latest firmware. Go to <https://www.chauvetprofessional.com> to download firmware updates.


### Security

The Security page on the Web Server gives the option to change the password to the connected product's web server. Enter the old password (**admin**, by default) and the new password twice, then click **Save Settings** to change the password.


## Operation

### Gobo Wheels

Gobo Wheel 1

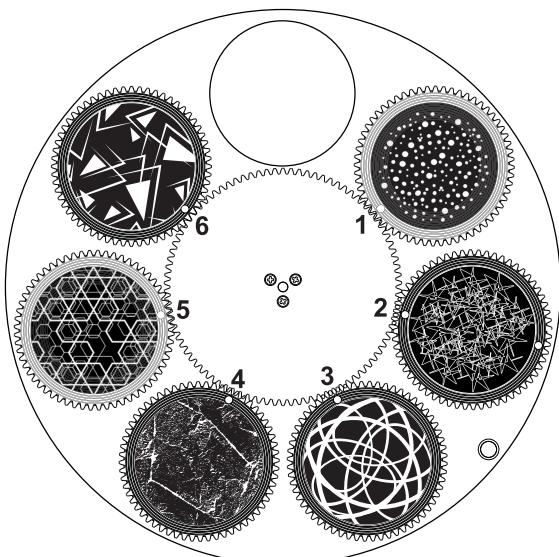


Gobo Wheel 2

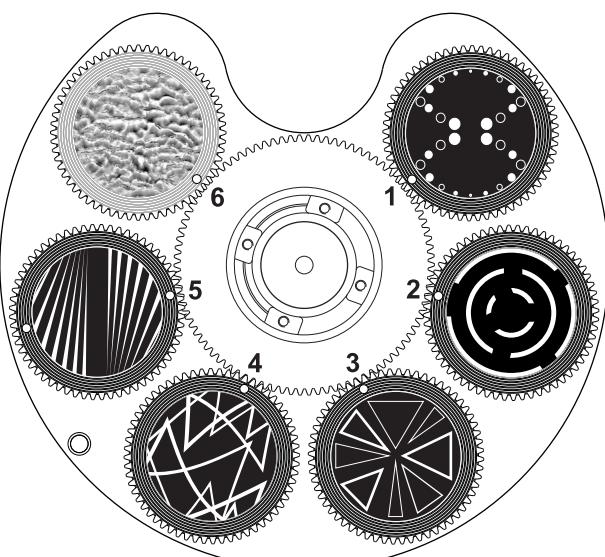

Gobo Wheel	Gobo #	Description	Gobo Wheel	Gobo #	Description
1	1	Dots	2	1	Pipes & Poles
	2	Paperclip Party		2	Cookie Cutter
	3	Orbital		3	This Way
	4	Dirty Dirt		4	Fast Moves
	5	Box Cutter		5	Laser Rays
	6	Crazy Turns		6	Limbo

### Gobo Dimensions

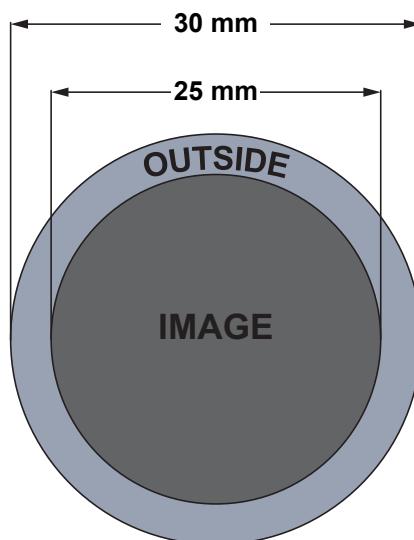

## Gobo Replacement


The gobos in both gobo wheels are removable from their gobo holder. This operation is quite simple, although it requires the technician to carefully follow the recommended procedure.

- **Make sure to disconnect the product's power cord before replacing a gobo.**
- **Always replace a gobo with a gobo of the same dimensions.**
- **When inserting a glass gobo, always make sure that the shiny side of the gobo (glass base) faces the light source. This provides a layer of protection against the high temperature from the LED.**

### Procedure

1. Turn the product off and disconnect it from the power outlet.
2. Open the head cover by loosening the screws on the top cover.
3. Separate the gobo holder away from the gobo wheel by pushing it toward the front of the moving head (direction 1 in the diagram). Be careful not to push the gobo out of the gobo holder.
4. Extract the gobo holder by pulling it outward (direction 2 in the diagram).
5. On a flat surface, remove the expansion ring that holds the gobo in place and remove the gobo from the gobo holder.
6. Insert a new gobo and hold it in place with the expansion ring.
7. Slide the tip of the gobo holder under the pressure plate near the center of the gobo wheel.
8. Push the gobo holder inwards. DO NOT force the gobo holder into the gobo wheel slot. If correctly installed, the gobo holder should easily slide into the gobo wheel slot.



### Diagram

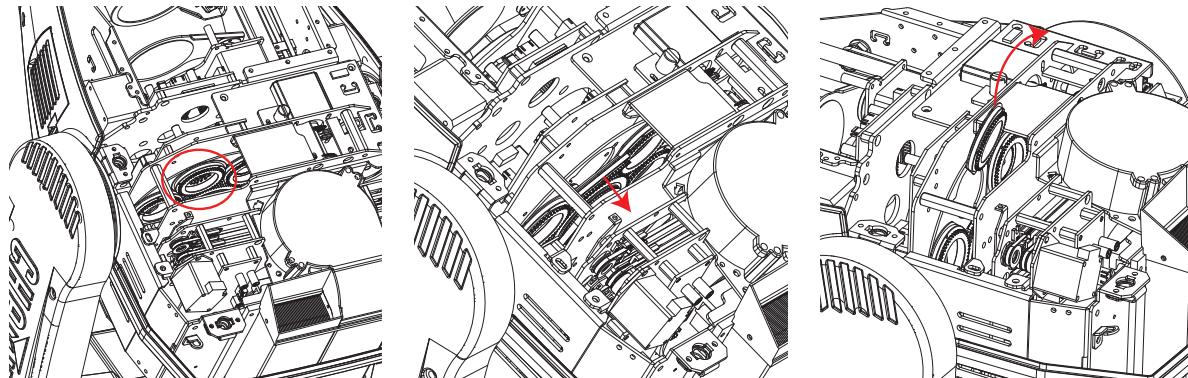

Locate

Pull Back

Remove

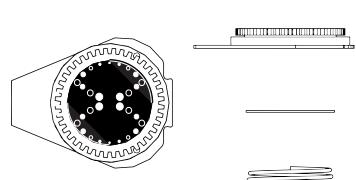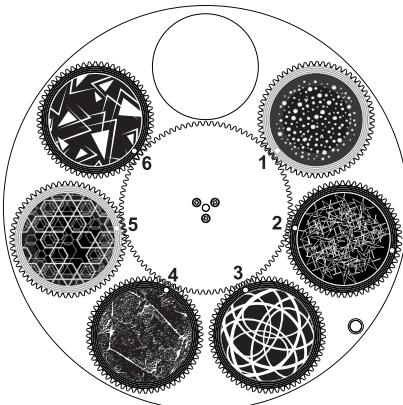

Gobo Holder

Gobo

Retaining Ring

## Operation

### Error Codes

See the table below for error codes and recommended solutions:

Error Code	Possible Reason	Potential Solution
<b>Base Fan1</b>	Base Fan 1 is damaged	Replace base fan 1
	Fan wires have poor connection	Check fan wire connection
<b>Base Fan2</b>	Base Fan 2 is damaged	Replace base fan 2
	Fan wires have poor connection	Check fan wire connection
<b>Base Fan3</b>	Base Fan 3 is damaged	Replace base fan 3
	Fan wires have poor connection	Check fan wire connection
<b>Base Fan4</b>	Base Fan 4 is damaged	Replace base fan 4
	Fan wires have poor connection	Check fan wire connection
<b>BladeR</b>	Framing shutter error'	Check module connection
		Make sure nothing is blocking the movement of the shutters/blade
		Check sensors for +/- 5v when open and closed
		Do a factory reset
		Update software
<b>Color</b>	Color error	Check module connection
		Make sure nothing is blocking the movement
		Check sensors for +/- 5v when open and closed
		Do a factory reset
		Update software
<b>CPU-A</b>	Display CPU	Do a factory reset Update software
<b>CPU-B</b>	Pan/tilt CPU	Do a factory reset Update software
<b>CPU-C</b>	Gobo/Color CPU error	Do a factory reset Update software
<b>CPU-D</b>	Zoom/Focus CPU error	Do a factory reset Update software
<b>CPU-E</b>	CMY CPU error	Do a factory reset Update software
<b>CPU-F</b>	Framing shutter CPU error	Do a factory reset Update software
<b>CPU-G</b>	Framing shutter CPU error	Do a factory reset Update software
<b>CPU-H</b>	Fan CPU error	Do a factory reset Update software
<b>CTO</b>	CTO/CMY error	Check module connection
		Make sure nothing is blocking the movement of the shutters/blade
		Do a factory reset
		Update software
<b>CYAN</b>	Sensor board is damaged	Replace the cyan sensor board
	The magnetic rod of the cyan sensor board is dropped or installed upside down	Check the magnetic rod
<b>FAN1</b>	Fan 1 error	Check fan connection Replace fan
<b>FAN2</b>	Fan 2 error	Check fan connection Replace fan

Error Code	Possible Reason	Potential Solution
<b>FAN3</b>	Fan 3 error	Check fan connection Replace fan
<b>FAN5</b>	Fan 5 error	Check fan connection Replace fan
<b>FAN6</b>	Fan 6 error	Check fan connection Replace fan
<b>FAN7</b>	Fan 7 error	Check fan connection Replace fan
<b>FAN8</b>	Fan 8 error	Check fan connection Replace fan
<b>Focus</b>	Focus error	Check module connection Make sure nothing is blocking the movement Check sensors for +/- 5V when open and closed Do a factory reset Update software
<b>F-SPA</b>	Framing shutter fan error	Check module connection Make sure nothing is blocking the movement Check sensors for +/- 5V when open and closed Do a factory reset Update software
<b>GFAN1</b>	GFan 1 error	Check fan connection Replace fan
<b>GFAN2</b>	GFan 2 error	Check fan connection Replace fan
<b>GFAN3</b>	GFan 3 error	Check fan connection Replace fan
<b>GFAN4</b>	GFan 4 error	Check fan connection Replace fan
<b>GFAN6</b>	GFan 6 error	Check fan connection Replace fan
<b>GFAN7</b>	GFan 7 error	Check fan connection Replace fan
<b>Gobo</b>	Gobo error	Check module connection Make sure nothing is blocking the movement Check sensors for +/- 5V when open and closed Do a factory reset Update software
<b>Gobo.R</b>	Gobo rotation error	Check module connection Make sure nothing is blocking the movement Check sensors for +/- 5V when open and closed Do a factory reset Update software

## Operation

Error Code	Possible Reason	Potential Solution
<b>Gobo2</b>	Gobo 2 error	Check module connection Make sure nothing is blocking the movement Check sensors for +/- 5V when open and closed Do a factory reset Update software
<b>Gobo2.R</b>	Gobo 2 rotation error	Check module connection Make sure nothing is blocking the movement Check sensors for +/- 5V when open and closed Do a factory reset Update software
<b>JFAN1</b>	JFAN1 error	Check fan connection Replace fan
<b>JFAN2</b>	JFAN2 error	Check fan connection Replace fan
<b>JFAN3</b>	JFAN3 error	Check fan connection Replace fan
<b>LIGHT_BLOCK</b>	Sunshield error	Check to ensure that the sunshield has moved out of the light path Check motor
<b>LED_HOT</b>	Overheated LED	Do a factory reset Update software Check connections Check fan functions
<b>MAGENTA</b>	Magenta error	Check module connection Make sure nothing is blocking the movement Check sensors for +/- 5V when open and closed Do a factory reset Update software
<b>Prism</b>	Prism error	Check module connection Make sure nothing is blocking the movement Check sensors for +/- 5V when open and closed Do a factory reset Update software
<b>Prism2</b>	Prism 2 error	Check module connection Make sure nothing is blocking the movement Check sensors for +/- 5V when open and closed Do a factory reset Update software
<b>Prism2.R</b>	Prism 2 rotating error	Check module connection Make sure nothing is blocking the movement Check sensors for +/- 5V when open and closed Do a factory reset Update software

Error Code	Possible Reason	Potential Solution
<b>R-OPEN</b>	Thermistor open	Do a factory reset Update software Check connection Replace thermistor
<b>R-SHORT</b>	Thermistor short	Do a factory reset Update software Check connection Replace thermistor
<b>X_cm1</b>	Pan magnetic sensor 1 error	Do a factory reset Update software Check connection Replace sensor
<b>X_op</b>	Pan optocouple error	Do a factory reset Update software Check connection Replace sensor
<b>Y_cm</b>	Tilt magnetic sensor error	Do a factory reset Update software Check connection Replace sensor
<b>Y_op</b>	Tilt optocouple error	Do a factory reset Update software Check connection
<b>YELLOW</b>	Yellow error	Check module connection Make sure nothing is blocking the movement Check sensors for +/- 5V when open and closed Do a factory reset Update software
<b>Zoom</b>	Zoom error	Check module connection Make sure nothing is blocking the movement Check sensors for +/- 5V when open and closed Do a factory reset Update software
<b>ZFan1</b>	Z Fan 1 is damaged Fan wires have poor connection	Replace Z fan 1 Check fan wire connection
<b>ZFan2</b>	Z Fan 2 is damaged Fan wires have poor connection	Replace Z fan 2 Check fan wire connection
<b>ZFan3</b>	Z Fan 3 is damaged Fan wires have poor connection	Replace Z fan 3 Check fan wire connection
<b>ZFan4</b>	Z Fan 4 is damaged Fan wires have poor connection	Replace Z fan 4 Check fan wire connection

## Maintenance

# 5. Maintenance

## Product Maintenance

Dust build-up reduces light output performance and can cause overheating. This can lead to reduction of the light source's life and/or mechanical wear. To maintain optimum performance and minimize wear, clean all lighting products at least twice a month. However, be aware that usage and environmental conditions could be contributing factors to increase the cleaning frequency.

To clean the product, follow the instructions below:

1. Unplug the product from power.
2. Wait until the product is at room temperature.
3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external surface/vents.
4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
5. Apply the solution directly to a soft, lint free cotton cloth or a lens cleaning tissue.
6. Softly drag any dirt or grime to the outside of the transparent surface.
7. Gently polish the transparent surfaces until they are free of haze and lint.



**Always dry the transparent surfaces carefully after cleaning them.**



**Dry off this product before storing it in the case. Failure to do so may result in deterioration of the product's housing.**



**Do not spin the cooling fans with compressed air. Damage may result.**

## Torque Measurements

To maintain the IP rating when reassembling the product, use the given torque measurements for each of the following screws and bolts:

Fixture Parts	Torque Rating (Kgf.cm)	Torque Rating (lbf.in)
Screws inside feet	15.3	13.3
Base screws around outside (not the feet)	53	46
Base screws in middle	89.7	77.8
Omega bracket holder	12.2	10.6
Front and rear base cover	25.5	22.1
Screws around power and data ports	3.5	3
Fuse	10.7	9.2
Center of yoke plate	25.5	22.1
Arm cover screws	25.5	22.1
Allen Key screws next to front lens	25.5	22.1
Allen Key screws holding in front lens cover	12.2	10.6
Allen Key screws next to heat pipes on the back	25.5	22.1
Allen Key screws head covers	25.5	22.1

## Vacuum Test Measurements

Use the IP Tester from Chauvet Professional to ensure the product has been reassembled correctly by following the information below:

Parameters	Values
Method	Positive
Test pressure	2.18 kPa
Test duration	60 seconds
PASS state leak pressure	<0.02 kPa

## Gobo Maintenance

To ensure optimal operation, 1) inspect and 2) clean gobos every four months. More frequent maintenance may be necessary if usage is higher.


To inspect, remove each gobo holder and check if:

- the holders are clean (free of dirt, grime, or gunk).
- the gobos are properly installed in the holders.
- all the bearings are in place.
- the holders are rotating freely.

To clean the gobos and the gobo holder, follow the instructions below:

1. Remove the gobos from the holder.
2. Clean the gobos with a soft, lint-free cotton cloth. Use an ammonia-free glass cleaner sprayed to a piece of lint-free cotton cloth to clean glass gobos.
3. Submerge the gobo holder (without the gobo installed) in a container with a liquid lubricant (i.e., WD40) and let it rest for a couple of minutes.
4. Shake the container with the gobo holder inside to help release/loosen any gunk/grime/dirt.
5. Take the gobo holder out of the container and clean it using a small nylon brush.
6. Wipe off all the lubricant from the gobo holder using a piece of lint-free cotton cloth.
7. Apply a small coat of synthetic oil (i.e., Liquid Bearings) to the bearings and rotate it thoroughly in both directions (needle tip applicer recommended). Make sure the gobo holder is rotating freely and is not making any abnormal noise.
8. Reinstall the gobos in the gobo holder. Make sure the gobos are in the correct positions.
9. Reinstall the gobo holder in the unit.

## Transporting on Truss or Racks

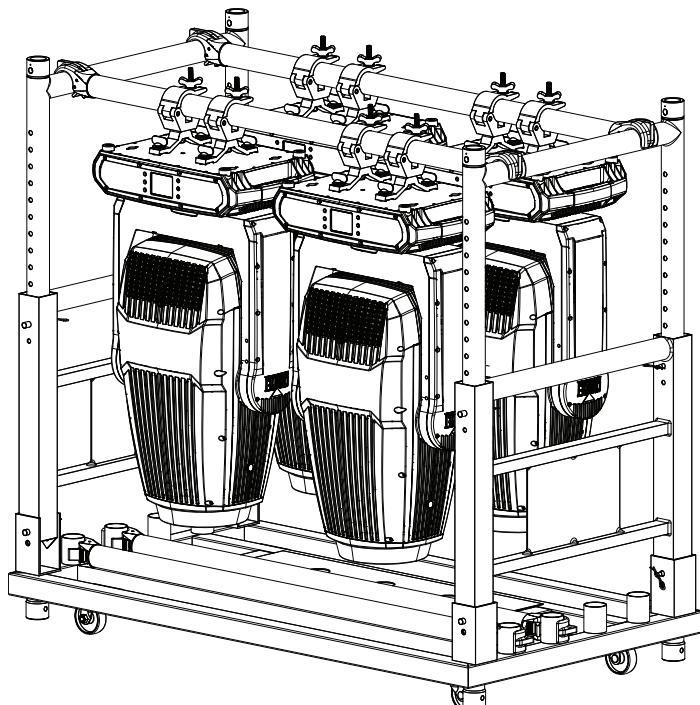

When transporting fixtures in pre-rigged truss and transportation racks, mount fixtures in the vertical position with the lenses facing down and the pan and tilt locks engaged. This is to prevent undue stress on the tilt locks and limit the amount of off-axis bounce on internal components.

## Technical Specifications

### 6. Technical Specifications

#### Dimensions and Weight

Length	Width	Height	Weight
18.30 in (465 mm)	11.93 in (303 mm)	32.91 in (836 mm)	111.4 lb (50.3 kg)

**Note:** Dimensions in inches are rounded.

#### Power

Parameter	100 V, 60 Hz	120 V, 60 Hz	208 V, 60 Hz	230 V, 50 Hz	240 V, 50 Hz		
	Power Supply Type		Range		Voltage Selection		
Switching (internal)	100 to 240 VAC, 50/60 Hz		Auto-ranging				
Consumption	1892 W	1780 W	1740 W	1760 W	1780 W		
Operating Current	18.92 A	15.07 A	8.70 A	7.79 A	7.51 A		
Fuse/Breaker	25 A, 500 V	25 A, 500 V	25 A, 500 V	25 A, 500 V	25 A, 500 V		
Power I/O		U.S./Worldwide		UK/Europe			
Power Input Connector	Seetronic Powerkon IP65		Seetronic Powerkon IP65				
Power Cable Plug	Bare end		Bare end				

#### Light Source

Type	Color	Quantity	Power	Current	Lifespan
LED	Cool White	1	1250 W	4 A	50,000 hours

#### Photometrics

Beam Angle	Field Angle	Cutoff Angle	Zoom Angle
6.2° to 48.7°	8.4° to 54.1°	8.8° to 58.3°	6.4° to 58.3°
Illuminance @ 5 m (6.2°)	Illuminance @ 5 m (58.3°)	CRI	CRI w/Filter
127,159 lux	4,019 lux	71.5	91

#### Acoustic

Parameter	Idle	Max	ECO	Auto	Full
Noise Level @ 1 m	38.5 dB(A)	43.8 dB(A)	37.9 dB(A)	43.3 dB(A)	50.5 dB(A)

#### Thermal

Maximum External Temperature	Cooling System
113 °F (45 °C)	Fan-assisted Convection

#### Control

DMX I/O Connector	Ethernet I/O Connector	Channel Range
5-pin IP-rated XLR	Neutrik IP-rated RJ45	38 or 55

#### Ordering

Product Name	Item Name	Item Code	UPC Number
Maverick Storm 4 Profile	MAVERICKSTORM4PROFILE	08011958	781462223069

RoHS



## Contact Us

General Information	Technical Support
<b>Chauvet World Headquarters</b>	
Address: 3360 Davie Rd., Suite 509 Davie, FL 33314 Voice: (954) 577-4455 Fax: (954) 929-5560 Toll Free: (800) 762-1084	Voice: (844) 393-7575 Fax: (954) 756-8015 Email: <a href="mailto:chauvetcs@chauvetlighting.com">chauvetcs@chauvetlighting.com</a> Website: <a href="http://www.chauvetprofessional.com">www.chauvetprofessional.com</a>
<b>Chauvet U.K.</b>	
Address: Pod 1 EVO Park Little Oak Drive, Sherwood Park Nottinghamshire, NG15 0EB UK Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110	Email: <a href="mailto:UKtech@chauvetlighting.eu">UKtech@chauvetlighting.eu</a> Website: <a href="http://www.chauvetprofessional.eu">www.chauvetprofessional.eu</a>
<b>Chauvet Benelux</b>	
Address: Vaartlaan 9 9800 D deinze Belgium Voice: +32 9 388 93 97	Email: <a href="mailto:BNLtech@chauvetlighting.eu">BNLtech@chauvetlighting.eu</a> Website: <a href="http://www.chauvetprofessional.eu">www.chauvetprofessional.eu</a>
<b>Chauvet France</b>	
Address: 3, Rue Ampère 91380 Chilly-Mazarin France Voice: +33 1 78 85 33 59	Email: <a href="mailto:FRtech@chauvetlighting.fr">FRtech@chauvetlighting.fr</a> Website: <a href="http://www.chauvetprofessional.eu">www.chauvetprofessional.eu</a>
<b>Chauvet Germany</b>	
Address: Bruno-Bürgel-Str. 11 28759 Bremen Germany Voice: +49 421 62 60 20	Email: <a href="mailto:DEtech@chauvetlighting.de">DEtech@chauvetlighting.de</a> Website: <a href="http://www.chauvetprofessional.eu">www.chauvetprofessional.eu</a>
<b>Chauvet Mexico</b>	
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2) Zona Industrial Lerma Lerma, Edo. de México, CP 52000 Voice: +52 (728) 690-2010	Email: <a href="mailto:servicio@chauvet.com.mx">servicio@chauvet.com.mx</a> Website: <a href="http://www.chauvetprofessional.mx">www.chauvetprofessional.mx</a>

## Warranty & Returns

For warranty terms and conditions and return information, please visit our website.

For customers in the United States and Mexico: [www.chauvetlighting.com/warranty-registration](http://www.chauvetlighting.com/warranty-registration).

For customers in the United Kingdom, Republic of Ireland, Belgium, the Netherlands, Luxembourg, France, and Germany: [www.chauvetlighting.eu/warranty-registration](http://www.chauvetlighting.eu/warranty-registration).